



**Firmware Release Note**

**P792H**

**Standard version**

**Release 3.40(BZ.0)C0**

<b>Date:</b>	<b>March 12, 2004</b>
<b>Author:</b>	<b>Yi-Fen Chen</b>

# **ZyXEL P792H Standard Version release 3.40(BZ.0)C0 Release Note**

**Date:** March. 12, 2004

## **Supported Platforms:**

ZyXEL P792H

## **Versions:**

ZyNOS Version: V3.40(BZ.0) | 3/12/2004 17:19:46

Bootbase Version: V1.14 | 11/10/2003 20:56:40

## **Notes:**

Support Globespan modem code R2.3.1.

## **Known Issues:**

1. UPnP can't work on Windows Messenger which version is higher than 4.7.
2. File transfer on Windows Messenger 4.7 can't work fine when firewall and UPnP are active.
3. There are some SIP issues on CISCO ATA phone. It's fail to make the second call by CISCO ATA phone after waiting around 15 minutes from the first call.

## **Features:**

### **Modifications in V 3.40(BZ.0)C0 | 03/12/2004**

1. Change to FCS version

### **Modifications in V 3.40(BZ.0)b2 | 03/05/2004**

1. [BUG FIXED]  
Symptom: In VPN-Summary, the content of rules number greater than 5 are not updated.  
Condition: 1. Configure VPN rule 6 & save  
2. Delete VPN rule 6  
3. In VPN-Summary page, rule 6 still exist.
2. [BUG FIXED]  
Symptom: CI-command "ip smtp sendmail" cause device reboot.  
Condition: Type CI-command "ip smtp sendmail" will cause device reboot.
3. [BUG FIXED]  
Symptom: Not update DNS information.  
Condition: If ISP assigns different DNS after PPP connection, the device will not update the DNS information.

4. [BUG FIXED]  
Symptom: qlm error or traffic is blocked  
Condition: qlm error bug:
  - 1). Setup 2 remote node, node 1 is RFC-1483 bridge mode. node 2 is routing mode with PPPoE nailed-up.
  - 2). Actuality, node 2 just there and do nothing.
  - 3). Heavy traffic through our device will cause qlm error.
5. [FEATURE ENHANCED]  
Support SIP pass-through.

**Modifications in V 3.40(BZ.0)b1 | 01/07/2004**

1. Create Project.
2. [FEATURE ENHANCED]  
Support Wan Backup.
3. [FEATURE ENHANCED]  
Support Firewall and Content Filter.
4. [FEATURE ENHANCED]  
Support VPN
5. [FEATURE ENHANCED]  
Support H.323v2 for NAT.ALG

## Annex A CI Command List

Command Class List Table		
<a href="#">System Related Command</a>	<a href="#">Exit Command</a>	<a href="#">Ethernet Related Command</a>
<a href="#">WAN Related Command</a>	<a href="#">IP Related Command</a>	<a href="#">Bridge Related Command</a>
<a href="#">XDSL Related Command</a>		

### System Related Command

[Home](#)

Command				Description
sys				
	adjtime			retrive date and time from Internet
	atsh			display MRD field
	callhist			
		display		display call history
		remove	<index>	remove entry from call history
	countrycode		[countrycode]	set country code
	date		[year month date]	set/display date
	domainname			display domain name
	edit		<filename>	edit a text file
	extraphnum			maintain extra phone numbers for outcalls
		add	<set 1-3> <1st phone num> [2nd phone num]	add extra phone numbers
		display		display extra phone numbers
		node	<num>	set all extend phone number to remote node <num>
		remove	<set 1-3>	remove extra phone numbers
		reset		reset flag and mask
	feature			display feature bit
	hostname		[hostname]	display system hostname
	log			
		clear		clear log error
		disp		display log error
		online	[on/off]	turn on/off error log online display
	stdio		[second]	change terminal timeout value
	time		[hour [min [sec]]]	display/set system time
	trcdisp	parse, brief, disp		monitor packets
	syslog			
		server	[destIP]	set syslog server IP address
		facility	<FacilityNo>	set syslog facility
		type	[type]	set/display syslog type flag
		mode	[on/off]	set syslog mode
	version			display RAS code and driver version
	view		<filename>	view a text file
	wdog			
		switch	[on/off]	set on/off wdog
		cnt	[value]	display watchdog counts value: 0-34463
	romreset			restore default romfile
	socket			display system socket information
	ddns			
		debug	<level>	enable/disable ddns service
		display	<iface name>	display ddns information
		restart	<iface name>	restart ddns
		logout	<iface name>	logout ddns

	cpu			
		display		display CPU utilization
	xmodemmode	[crc checksum]		select xmodem mode

## Exit Command

[Home](#)

Command				Description
exit				exit smt menu

## Ethernet Related Command

[Home](#)

Command				Description
ether				
	config			display LAN configuration information
	driver			
		Cnt		
			disp <name>	display ether driver counters
		Status	<ch name>	see LAN status
		config	[0 1=auto normal] [0 1=10 100] [0 1=HD FD] <ch-name>	Configure LAN Settings Auto/Normal, 100/10 Mbps, Half/Full Duplex
	version			see ethernet device type

## WAN Related Command

[Home](#)

Command				Description
Wan	atm	test	[fix rand period oam loopback]	Generate ATM traffic
	hwsar	Disp		Display hwsar packets incoming/outgoing information
		Clear		Clear hwsar packets information
		Sendoam		Send OAM packets: <vpi> <vci> <f5> <end-to-end> <type:0(AIS) 1(RDI) 2(LoopBack)>

## IP Related Command

[Home](#)

Command				Description
ip				
	address		[addr]	display host ip address
	alias		<iface>	alias iface
	aliasdis		<0 1>	disable alias
	arp			
		status	<iface>	display ip arp status
	dhcp		<iface>	
		client		
			release	release DHCP client IP
			renew	renew DHCP client IP
		status	[option]	show dhcp status
	dns			
		query		
		stats		
			clear	clear dns statistics
			disp	display dns statistics
	icmp			
		status		display icmp statistic counter
		discovery	<iface> [on off]	set icmp router discovery flag
	ifconfig		[iface] [ipaddr] [broadcast <addr>  mtu <value> dynamic]	configure network interface

	ping		<hostid>	ping remote host
	route			
		status	[if]	display routing table
		add	<dest_addr default>[/<bits>] <gateway> [<metric>]	add route
		addiface	<dest_addr default>[/<bits>] <gateway> [<metric>]	add an entry to the routing table to iface
		addprivate	<dest_addr default>[/<bits>] <gateway> [<metric>]	add private route
		drop	<host addr> [/<bits>]	drop a route
	status			display ip statistic counters
	udp			
		status		display udp status
	tcp			
		status	[tcb] [<interval>]	display TCP statistic counters
	xparent			
		join	<iface1> [<iface2>]	join iface2 to iface1 group
		break	<iface>	break iface to leave ipxparent group
	igmp			
		debug	[level]	set igmp debug level
		forwardall	[on/off]	turn on/off igmp forward to all interfaces flag
		querier	[on/off]	turn on/off igmp stop query flag
		iface		
			<iface> grouptm <timeout>	set igmp group timeout
			<iface> interval <interval>	set igmp query interval
			<iface> join <group>	join a group on iface
			<iface> leave <group>	leave a group on iface
			<iface> query	send query on iface
			<iface> rsptime [time]	set igmp response time
			<iface> start	turn on of igmp on iface
			<iface> stop	turn off of igmp on iface
			<iface> ttl <threshold>	set ttl threshold
			<iface> v1compat [on/off]	turn on/off v1compat on iface
		robustness	<num>	set igmp robustness variable
		status		dump igmp status

**Bridge Related Command**[Home](#)

Command				Description
bridge				
	cnt			related to bridge routing statistic table
		disp		display bridge route counter
		clear		clear bridge route counter
	stat			related to bridge packet statistic table
		disp		display bridge route packet counter
		clear		clear bridge route packet counter

**XDSL Related Command**[Home](#)

Command				Description
xdsl				
	state			display XDSL status about physical layer
	restart			restart XDSL driver
	cnt	disp		display xsdl error counter
		clear		clear xsdl error counter